

## USING RSE

The system is operated using the remote control. The remote is removed from the arm rest by pressing the top of the remote to unlatch it.

**!** Do not attempt to pull the remote control out of its docked position.

When the system is activated the remote control touch screen becomes active.



E143615

Use the left/right screen select keys on the rear media remote control, or the front touch screen controls, to allow further options to be set and selected.

**Note:** A help screen is available from each screen/menu. To view the help screen for guidance on the available functions and options, touch the question mark (?) icon.

## HEADPHONES

The volume control for each set of headphones is adjusted on the headphones.

## REMOTE CONTROL BATTERY

The remote control battery is automatically recharged while the remote is docked. The battery should only be changed or removed by a Land Rover Dealer/Authorised Repairer.