


TOUCH SCREEN HOME MENU

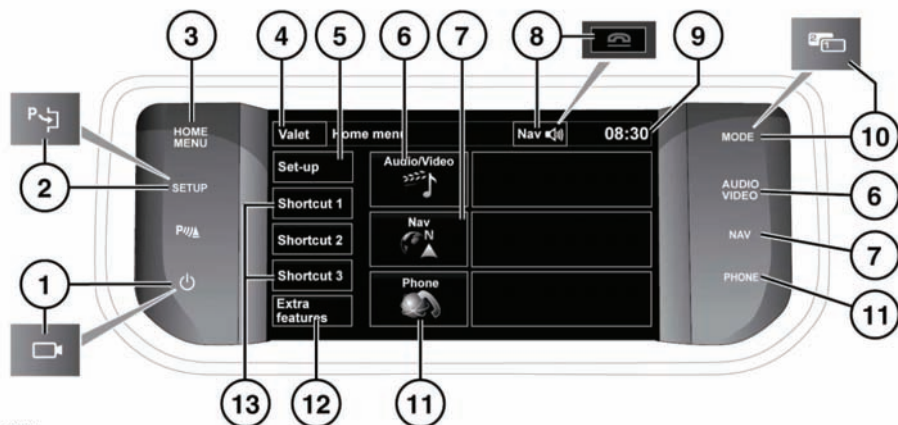

E143643

- ❗ Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting
 - ❗ Avoid spilling or splashing liquids onto the touch screen.
1. Press to turn on/off the screen. When proximity cameras are fitted, this icon is changed and the button will turn cameras on/off.
 2. Press to select the touch screen **Setup** menu. When Park Assist is fitted, this icon is changed and the button should be pressed to activate Park Assist.
 3. Press to select the **Home menu**.
 4. Touch to select **Valet** mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed
 5. Touch to select the touch screen **Setup** menu.
 6. Touch or press to select the **Audio/Video** menu, see **137, AUDIO/VIDEO CONTROLS**.
 7. Touch or press to select the **On road Navigation** menu. Current set destination is displayed.
 8. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
 9. Touch to adjust time/date.
 10. Touch to select **Mode** menu. When Dual view is fitted, this icon is changed and the button should be pressed to access the Dual view screen display.
 11. Touch or press to select the **Phone** menu.
 12. Press to select the **Extra features** menu.
 13. To change the shortcuts, see **67, TOUCH SCREEN SETUP**.