


## USING THE PARKING AID

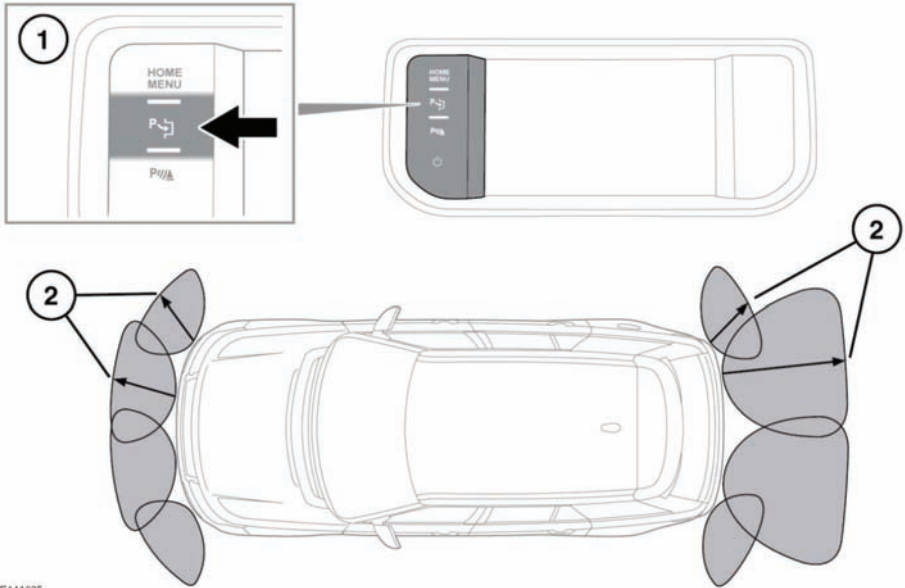

E144825



**Parking aids may not detect moving objects such as children and animals, until they are dangerously close. Always use extreme caution when manoeuvring.**



Park assist sensors may not detect some obstructions (e.g. narrow posts or small objects close to the ground).

**Note:** The rear sensors are automatically disabled when a trailer is connected.

1. When Reverse (R) is selected, the front and rear parking sensors are activated automatically, and the switch indicator will illuminate.

**Note:** When a forward gear is selected then manually select the front sensors.

To manually activate the front sensors press the Park assist button and the switch indicator will illuminate.

To turn off the system when active, press the button. The switch indicator will extinguish.

2. The range of the parking aid sensors varies between the front, rear and corners of the vehicle.

The front sensors will remain active as long as the vehicle's forward speed does not exceed 16 km/h (10 mph).

Selecting N from R will keep front and rear sensors active.

When objects are detected, the parking aid emits a warning tone which increases in frequency as the vehicle gets closer to the object and then becomes constant when the obstacle is within 300 mm (12 inches).

**Note:** The front parking aid provides an audible proximity warning when driving forwards and when reversing.