



Do not attach stickers or objects to the rear bumpers, that may interfere with the radar sensors.

In addition to the functionality provided by the Blind Spot Monitor, the closing vehicle detection system monitors a larger area behind the vehicle (1). If a vehicle is identified by the system as being a rapidly approaching vehicle (2), the amber warning icon will flash in the relevant mirror to indicate that there is a potential hazard and therefore, that a lane change might be dangerous. When the vehicle reaches the area monitored by the Blind Spot Monitor (3), the amber warning icon will illuminate continuously.

The radar monitors the area extending from the exterior mirror rearwards, to approximately 70 metres (230 feet) behind the rear wheels, and up to approximately 2.5 metres (8 feet) from the side of the vehicle (the width of a typical carriageway lane).

**Note:** This radar sensor is approved in all RTTE countries.

**Note:** The system covers an area of a fixed lane width. If the lanes are narrower than a typical carriageway lane, objects travelling in non-adjacent lanes may be detected.

**Note:** If a rapidly overtaking vehicle is detected on both sides of the vehicle simultaneously, the warning icons in both mirrors will flash.

**Note:** The closing vehicle detection system is disabled when a trailer is attached.

**Note:** When BSM is disabled through the instrument panel menu (see 63, **INSTRUMENT PANEL MENU**) the closing vehicle detection system is also disabled.

## BSM SENSORS

The BSM system will automatically disable if either of the sensors become completely obscured. An amber warning indicator dot (2) is displayed in the exterior mirror and the message BLIND SPOT MONITOR SENSOR BLOCKED appears in the message centre.

**Note:** Blockage testing is only initiated when vehicle speed is above 10 km/h (6 mph) and will take at least two minutes of accumulated driving above this speed, to determine that the sensor is blocked.

If the sensors become blocked, then please check that there is nothing obscuring the rear bumper and that it is clear from ice, frost and dirt.

If a fault with one of the radar sensors is detected, an amber warning indicator dot is displayed in the exterior mirror and the message **BLIND SPOT MONITOR NOT AVAILABLE** is displayed in the message centre.

**Note:** Even if the detected fault only affects the radar sensor on one side of the vehicle, the whole system is disabled. If the fault is temporary, the system will operate correctly once the engine has been switched off and then on again.

If a fault in the system occurs, consult your Dealer/Authorised Repairer.