



Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the screen.

15. Air conditioning.
16. Recirculation. Press for timed recirculation. Press and hold for latched (continuous) recirculation. To cancel recirculation, press the button again.  
**Note:** *Prolonged use at low temperatures may cause the windows to mist.*
17. Blower speed control. In manual mode, the current speed selection is indicated in the integrated screen on the blower speed control. Rotate fully anti-clockwise to switch off climate control.

18. Rear climate menu.

**Note:** *The indicator lamps in the switches will illuminate when the function is selected.*

**Note:** *In low temperatures it is advisable to close the centre face level vent and direct air flow from the outer face level vents towards the side windows. This will help to keep the windows clear of ice.*

**Note:** *The climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form but this is normal and no cause for concern.*

Timed climate controls the optional auxiliary heater and can be set from the **Extra features** menu. See **73, SETTING A TIME FOR TIMED CLIMATE OPERATION.**

## AUTOMATIC RECIRCULATION

If an air quality sensor is fitted, the climate control system will monitor exterior air pollution and humidity and select recirculation if either reaches a predetermined level. This feature only operates when the climate control system is in AUTO mode. The sensitivity of the air quality sensor can be set via the touch screen. See **71, AIR QUALITY SENSOR.**

Pressing the recirculation button will deactivate automatic recirculation.

## AIR QUALITY SENSOR

The sensitivity of the air quality sensor can be adjusted using the touch screen:

1. Select **Settings** from the **Climate** menu.
2. Touch the +/- buttons on the screen to increase/decrease sensitivity.

To switch off air quality sensing, decrease sensitivity to the minimum setting.



The auto recirculation icon appears on the touch screen when the air quality sensor is switched on.

## CLIMATE SEATS

**Note:** *The climate seats will only operate when the engine is running.*

Seat climate is controlled from the **Home** or **Climate** menus on the touch screen or by the climate and seat menu hard keys. See **72, SEAT MASSAGE**

**Note:** *The Front seats menu will be displayed.*

Heated ventilation:

- Touch the up arrow icon to switch heated ventilation on at maximum (3 red bars).