

# Warning lamps

## EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

## TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the message centre, to warn that one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

## HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

## FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

## SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

## HIGH BEAM ASSIST (GREEN)



Illuminates when the auto high beam feature has switched on the high beams.

## DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

## INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Eco Stop/Start system.

**Note:** Other warnings normally associated with an engine shutdown, for example the ignition warning lamp, do not illuminate during an engine shutdown by the Eco Stop/Start system.

## HILL DESCENT CONTROL (GREEN)



Illuminates continuously when HDC is selected and HDC operating conditions are met.

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.

## LOW RANGE (GREEN)



Illuminates when Low range has been selected.