

## DAYTIME RUNNING LAMPS

With the lighting control in the Off position, Daytime running lamps will switch on automatically under the following conditions:

- The engine is running.
- The gear selector is out of Park (P).
- The parking brake is not applied (is released) - market dependent.



Unless required or prohibited by law, daytime running lamps can be disabled or enabled by your Land Rover Dealer/Authorised Repairer.

## HEADLAMP COURTESY DELAY

This feature operates whenever the headlamp control is left in the AUTO position and the ignition is turned off. The headlamps will remain illuminated for up to 240 seconds.

**Note:** *The time delay may be changed via the Vehicle Set-Up menu (see 63, INSTRUMENT PANEL MENU).*

## HIGH BEAM ASSIST

This feature automatically selects and deselects high beam, under specific conditions of road lighting and in the absence of other vehicle's lights. The system is only active when the ambient light drops below a predetermined level.

**Note:** *It is not recommended that auto high beam is used while driving off road.*

For auto high beam to become operational, the lighting control must be in the **AUTO** position, with low beam headlamps selected. See **41, LIGHTING CONTROL**.

The system will only activate when the vehicle speed exceeds 40 km/h (25 mph). The system will deactivate when vehicle speed drops below 24 km/h (15 mph).

To manually select high beam, move the stalk to the high beam position as normal. To return to Auto high beam, move the stalk back to the central position.

To manually override to low beam from high beam, pull the stalk to the flash position and auto high beam will be cancelled. To return to auto high beam, push the stalk to the high beam position and then return it to the central position.



A green warning lamp illuminates when auto high beam is selected. See **60, HIGH BEAM ASSIST (GREEN)**.

To turn off auto high beam, turn the lighting control from **AUTO** to headlamps on.

This feature can be disabled/enabled using the **Vehicle Set-Up** menu (see **63, INSTRUMENT PANEL MENU**).

The following may affect the operation of auto high beam:

- *Highly reflective road signs.*
- *Vehicles with dim headlamps.*
- *Adverse weather conditions.*
- *Dirty sensor.*
- *Dirty, damaged, or misted windscreen.*

**Note:** *The system cannot be relied upon to activate or de-activate high beam in all possible circumstances. It remains the driver's responsibility to ensure correct use of the headlamps at all times.*

**Note:** *Ensure that the sensor on the back of the rear view mirror is not blocked or obstructed.*