

Short press:

- To select the next radio preset.
- To select the next track on chosen audio source - CD, MP3 etc.
- when telephone is in use, press to scroll up lists of calls or phonebook entries.
- To select the next TV channel on the channel list or the next DVD chapter.

Long press:

- To auto seek up the frequency to the next radio station.
9. Press to decrease volume for any source.
10. **MODE**. Press repeatedly to scroll through all audio/video sources.

11. Seek down:

Short press:

- To select the previous radio preset.
- To select the previous track or start of current track on chosen audio source - CD, MP3 etc.
- When telephone is in use, press to scroll down lists of calls or phonebook entries.
- To select the previous TV channel on the channel list or the previous DVD chapter.

Long press:

- to auto seek down the frequency to the next radio station.

## AUDIO SETTINGS

To view the audio/video menu, press the audio video button or the **Audio settings** soft key on the touch screen.


To adjust the sound settings:

1. Touch the **+** or **-** soft keys to adjust Bass, Treble or Subwoofer levels.

2. If **Meridian Surround** is fitted, touch **DPLIIx**, **DTS Neo:6**, **Meridian Trifield** or select **Stereo** to switch surround sound off.
3. If **Meridian Signature Reference** is fitted, select **3D surround** and touch **DPLIIz**, **DTS Neo:X**, **Meridian Trifield 3D** to activate 3D surround mode.

**Note:** Surround sound options are not available for certain sources where the surround sound mode is set automatically.

To adjust balance and fade:

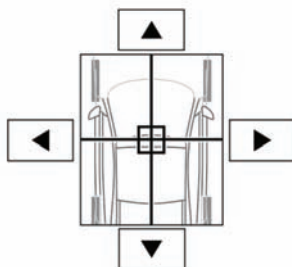

E132537

1. From the Sound settings menu, select **Balance/Fade**.
2. Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.

## LOADING DISCS



Do not force the disc into the slot.



Do not use irregular shaped CDs or DVDs and those with a scratch protection film or self-adhesive label attached.