


CLIMATE CONTROL

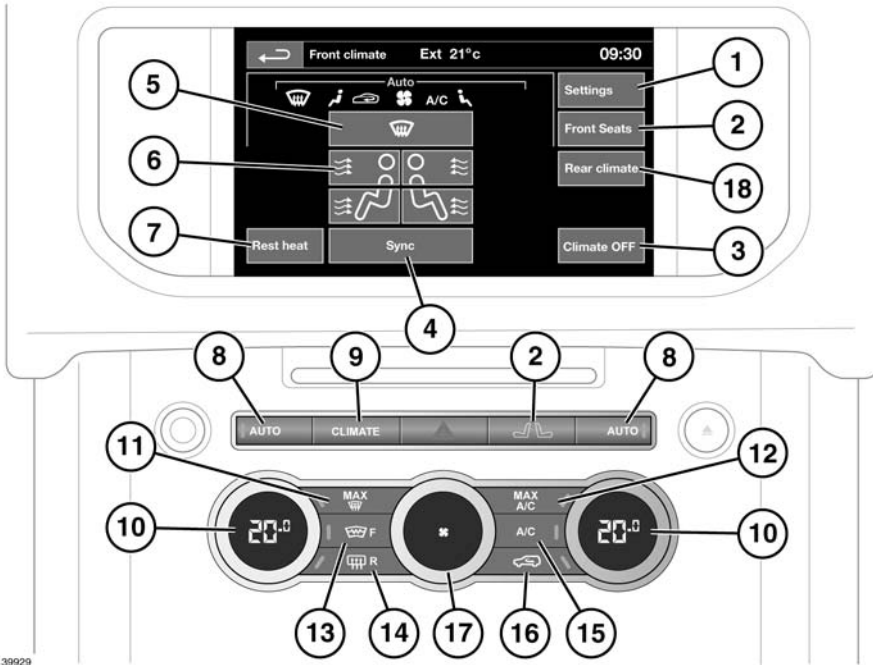

E139929

Press the **CLIMATE** hard key to access the climate control touch screen menu.

1. Climate control settings menu.
 2. Front heated/climate seat menu.
 3. Climate control system on/off.
 4. Synchronise driver and passenger climate zone settings.
 5. Distribute air to windscreen.
 6. Air distribution.
- Note:** More than one setting may be selected at a time to achieve the desired distribution.
7. Rest heat: With the engine switched off, press to operate. With a warm engine, it is possible to provide cabin heating, by using the residual heat from the engine. This

facility can be selected for up to 15 minutes after the engine is switched off and will operate until the engine cools.

8. AUTO mode. For fully automatic operation.
9. Show climate control menu.
10. Temperature controls. For individual driver/passenger settings.
11. Maximum defrost program.
12. Maximum air conditioning program.
13. Heated windscreen. The heated windscreen will deactivate after a predetermined length of time.
14. Heated rear screen. The heated rear screen will deactivate after a predetermined length of time.