

Entering the vehicle

Object detection while closing: If an object is detected that would interfere with the tailgate closing, tailgate movement will stop and then reverse a short distance. An audible warning will be given to indicate a mislock. Remove any obstructions and press the tailgate switch again to close.



While the tailgate is open, the locking platform and latch are exposed. Do not manually close the latch as it may also automatically 'soft close' and trap items or body parts.

TAILGATE OPENING HEIGHT

It is possible to set the maximum height to which a powered tailgate will open. This is useful in parking areas with very low overhead clearance or just for ease of use.

1. Open the tailgate to the position which you want to set as the maximum height.

Press any *external tailgate control to stop movement or position manually.

Note: *Not the Remote key fob or internal switch.

2. Ensure that the tailgate is stationary for at least three seconds.
3. To set the opening height: Press and hold the tailgate close button, on the tailgate, until you hear a chime.
4. Close the tailgate, then open again to check that it opens to the programmed height.

Note: If, after performing part 3 of the process the tailgate closes automatically, the required height has not been set. Repeat the process ensuring that all steps are adhered to.

To reset the maximum opening height to full, repeat the process, but manually move it to the fully open position before pressing and holding the button.

The powered tailgate may lose its position memory if there are multiple object detections or if the battery voltage is low. Powered operation may be inhibited.

To reset the tailgate:

1. Manually close the tailgate.
2. Press a tailgate release switch.
3. Allow the tailgate to power fully open or to the previously set position.
4. Press and release the close switch.
5. Allow the tailgate to power close fully.

The tailgate programmed position memory will now be restored.

DISABLING THE POWERED TAILGATE

The powered tailgate can be disabled by pressing and holding the lower tailgate open/close button for 20 seconds. An audible confirmation tone will sound if the operation is successful. To re-enable the powered tailgate, repeat the procedure.