

If continued use of manual mode is required, select Sport (**S**), to activate permanent manual mode. Permanent manual mode will be deactivated if the engine is over-revved or laboured, to prevent transmission and/or engine damage.

## HILL DESCENT

With Hill Descent Control (HDC) selected in either Drive (D), Sport (S) or manual gear selection (CommandShift™) modes, a low gear will be selected and maintained to provide maximum engine braking. Should the selector be moved to D from the S mode or if CommandShift™ is deactivated, the selected gear will be retained until the descent is completed. See **134, HDC CONTROLS**.

## STATIONARY RANGE CHANGING

With the vehicle stationary and the engine running, select Neutral (N).

Press the Lo button and release. The range change status will be confirmed after several seconds.

## RANGE CHANGE INDICATORS

While the Hi range transmission is in use, no range indicators are illuminated



In Lo range, the green warning lamp in the message centre and the Lo range status indicator lamp in the Lo button are illuminated.

While a range change is in progress, the indicator lamps will flash as follows:

### Hi to Lo change:

- The **Lo** range indicator lamps flash during the change and then illuminate constantly.
- The message **LOW RANGE SELECTED** is briefly displayed in the message centre.

### Lo to Hi change:

- The **Lo** range indicator lamps flash during the change.
- The **Lo** range indicator lamps extinguish when the change is complete.
- The message **HIGH RANGE SELECTED** is briefly displayed in the message centre.

## RANGE CHANGING ON THE MOVE

The recommended method of changing range is with the vehicle stationary. For experienced off-road drivers, a change from Lo to Hi while on the move can be accomplished, as detailed below.

**Note:** Changing from **Hi** to **Lo** can be performed only with the vehicle stationary.

## CHANGING FROM LOW TO HIGH RANGE

With the vehicle travelling no faster than 60 km/h (38 mph), select Neutral (N). Press and release the Lo button to select Hi range.

**Note:** If the Lo button is pressed before **N** is selected, the message **SELECT NEUTRAL FOR RANGE CHANGE** will be displayed in the message centre.

Indication of the range change status will be displayed in the message centre.

Once complete, select **D**.

## LIMP-HOME MODE

**Note:** The driver should be aware that the vehicle's performance will be reduced and must take this into account when driving. Use of the gear shift paddles will be disabled. In this event, seek qualified assistance as soon as possible.

In the event of an electrical or mechanical failure, transmission operation will be limited. **P**, **R**, **N**, **D** and **S** may still be used to enable the

vehicle to be driven to a safe area.

Some faults will cause the selector to be locked in position until the ignition is switched off. If the selected range flashes, it signifies that the driver request cannot be engaged. Re-select **N** and repeat the attempt.

If the transmission is still unable to select the requested gear, contact your Dealer/Authorised Repairer.