

Either your device or the vehicle system will ask for a PIN (Personal Identification Number). When prompted, enter a PIN of your choice and select **OK** to confirm.

8. Enter the same PIN into the other device.
9. Once your device is paired and connected to the system, a confirmation message will be displayed, before switching to the **My music**, Bluetooth® screen.

***Note:** Some media devices do not automatically connect and need to be manually connected, via the device or by using the **Change device** option.*

PAIRING AND CONNECTING USING THE TOUCH SCREEN

For further information on Bluetooth®, see **164, BLUETOOTH® INFORMATION**.

1. Switch on your device's Bluetooth® connection. Make sure that it is in Bluetooth® discoverable mode, sometimes referred to as find me mode (see your device's operating instructions for more information).
2. Switch on the ignition and ensure the touch screen is active.
3. From the Home menu, select **Audio/Video**, then **My Music**.
4. Touch **Blue-tooth**.
5. A menu will appear. Select **Change device**.
6. Select **Vehicle to device** option.
7. Identify your device from the displayed list and select the corresponding **Pair and connect** option.

***Note:** If more than 5 devices are detected, it may be necessary to use the scroll bar to see the entire list.*

8. When prompted, enter the PIN (Personal Identification Number) code into your device. See your device's operating instructions for more information.
9. Once your device is paired and connected to the system, a confirmation message will be displayed before switching to the **My music**, Bluetooth® view.

***Note:** Due to the duration of a Bluetooth® search, it is advisable that the time-out to home screen feature is switched off before attempting to search for Bluetooth® devices. This setting can be changed within **Set-up, Screen, Time out home**.*

LOSS OF CONNECTION

If a loss of connection between the vehicle and the Bluetooth® device occurs, a pop-up is displayed. Select **Reconnect** to automatically restore the connection. A confirmation pop-up will appear before the touch screen reverts to its previous mode.

CHANGING/DISCONNECTING A DEVICE

1. From the menu, select **Change device**.
2. Select **Disconnect**. A confirmation pop-up will appear and then you will be given the option to **Search new** or select a different device from the list of paired devices.