

## TURNING OFF THE TOUCH SCREEN

### Vehicles without proximity cameras:

1. Press the screen on/off hard key once to activate the screensaver (see **66, TOUCH SCREEN HOME MENU**). If the screensaver has not been set, a single press will turn off the touch screen.
2. Press the screen on/off hard key twice to turn off the touch screen.
3. To turn on the touch screen, press the screen on/off hard key.

### Vehicles with proximity cameras:



1. From the **Home menu**, touch the screen off soft key to activate the screensaver. If the screensaver has not been set, touching the screen off soft key will turn off the touch screen.
2. From the screensaver, touch the screen off soft key to turn off the touch screen.
3. To turn on the touch screen, touch anywhere on the screen.

## TOUCH SCREEN USE

- ⓘ Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting
- ⓘ Avoid spilling or splashing liquids onto the touch screen.

## TOUCH SCREEN DISPLAY ICONS

Touch screen display icons are as follows (they may not all be displayed at the same time):



Audio/Video: Touch to select the Audio/Video menu.



Climate: Touch to select the Climate control menu.



Navigation: Touch to select the Navigation menu.



Back soft key: Touch to return to the previous screen displayed.

## TOUCH SCREEN CARE

- ⓘ Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/ Authorised Repairer.

## TOUCH SCREEN SETUP

- Select **Set-up** from the Home menu.

The setup screen is divided into categories:

- Screen
- System
- Voice
- Audio

## SCREEN SETTINGS

**Volume pop-up:** Display Volume pop-up on/off.

**Screensaver:** Change screensaver.

**Time out home:** Sub menu selection screens can be set to revert to the **Home** menu after a pre-determined length of time.

**Theme:** Changes appearance of the touch screen soft keys.