


## ELECTRIC WINDOWS

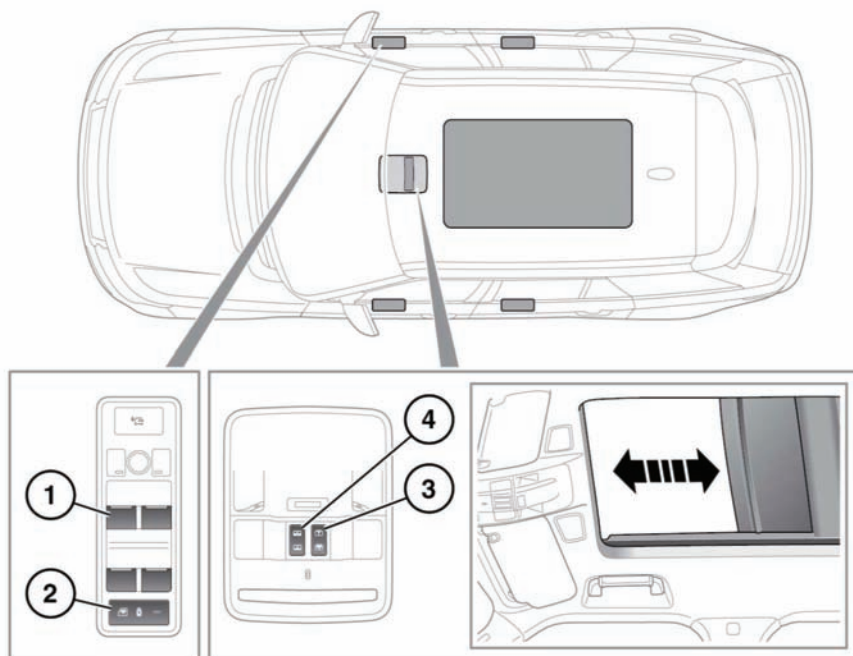

E142727

## 1. Window switches:

- To open a window: Press lightly at the front of the switch and release.
- To close a window: Pull-up lightly at the front of the switch and release.
- One touch open and close, press or pull firmly at the front of the switch and release.

**Note:** The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

## 2. Rear window isolator button.

**Note:** This will also isolate rear seat adjustment.



**If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.**

## 3. Panoramic roof blind switch:

- To open the blind: Press lightly at the rear of the switch and release.
- To close the blind: Press lightly at the front of the switch and release.
- One touch open and close, press firmly at the front or rear of the switch and release.