


ELECTRIC WINDOWS

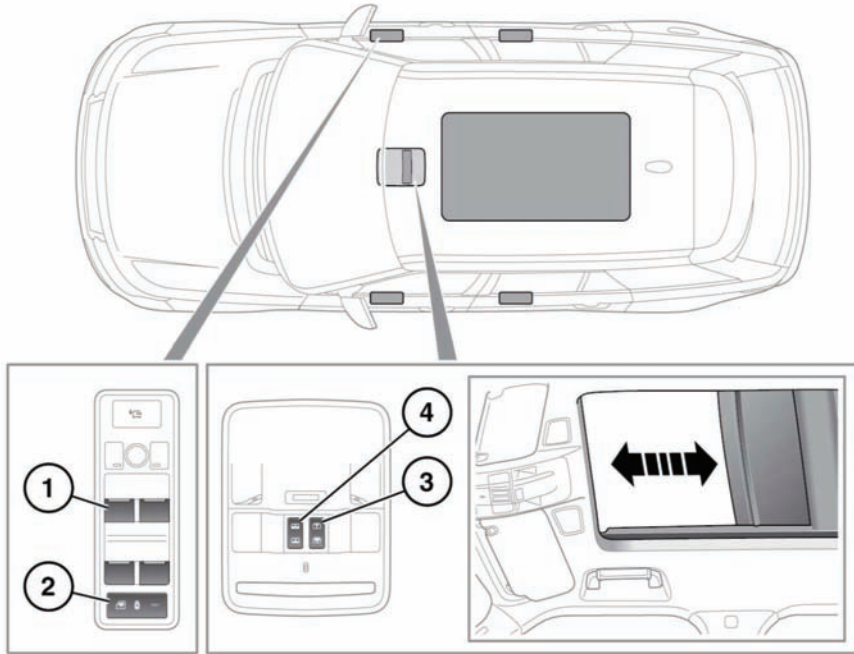

E142727

1. Window switches:

- To open a window: Press lightly at the front of the switch and release.
- To close a window: Pull-up lightly at the front of the switch and release.
- One touch open and close, press or pull firmly at the front of the switch and release.

Note: The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

2. Rear window isolator button.

Note: This will also isolate rear seat adjustment.



If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.

3. Panoramic roof blind switch:

- To open the blind: Press lightly at the rear of the switch and release.
- To close the blind: Press lightly at the front of the switch and release.
- One touch open and close, press firmly at the front or rear of the switch and release.