


## AIR SUSPENSION SYSTEM

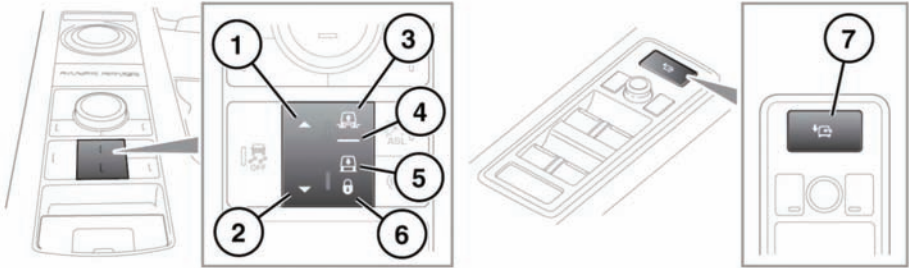

E140363



**Ensure that the vehicle is clear of people and obstacles before lowering the suspension. The difference between Off-road height and Access height can be 125 mm (4.9 in).**

The air suspension system may be used to raise or lower the height of the vehicle, using the air suspension control switch.

1. Raise the suspension height.
2. Lower the suspension height.
3. Off-road height indicator.
4. Normal height indicator.
5. Access height indicator: Access height is 50 mm (2.0 in) lower than normal height.
6. Suspension locked in Access height indicator.
7. Access height switch.

**Note:** The system may raise or lower the vehicle automatically (e.g. if a terrain response program requires it, or if the vehicle is travelling at high speed).

Changes to the height of the vehicle must be made when all doors are closed. Except for remote operation (see **107, REMOTE OPERATION**) the engine must also be running or in Intelligent stop/start mode. If a door is opened during a height change, the height change will be suspended. If the door is closed within 90 seconds, the height change will resume. If the doors are not closed in time the message centre will display a message **CONFIRM REQUIRED SUSPENSION HEIGHT**. Driving off will return the vehicle to normal height.

**Note:** If the air suspension is used many times in succession, speed of operation may slow.

## OFF-ROAD HEIGHT

Off-road height can be selected from normal height by pressing up on the raise/lower switch (1) at any speed up to 70 km/h (43 mph). The message centre will display OFF-ROAD HEIGHT SELECTED.

The Off-road height is dependant upon vehicle speed. The Off-road height selected will be confirmed with an **Off-Road (1) or (2)** icon in the Touch screen display when in the **4x4 info** menu. See **67, TOUCH SCREEN DISPLAY ICONS**