

To edit or delete an area to avoid from the stored list.

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Select **Avoid points**.
4. From the sub menu, select **Edit** or **Delete**.

## EASY ROUTE

In Route options, Easy Route can be turned On or Off.

When **On** is selected, **Easy Route** changes the calculation parameters of **Route 3** in order to reduce:

- Junctions.
- Turns.
- Turns that cross traffic.
- The priority of minor roads.
- Complex junctions and manoeuvres.

## LEARN ROUTE

In Route options, Learn Route can be turned On or Off.

When **On** is selected, if you make the same deviation from the proposed route 3 times, then the system will memorize the deviation and offer that as the normal route from then on. Select **Reset all routes** to delete any learnt routes and return to the default settings.

## VOICE GUIDANCE

To turn voice guidance on or off but maintain route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Route voice guidance** soft key. The soft key will be highlighted when voice guidance is enabled.

## CANCEL ROUTE GUIDANCE

To cancel route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Cancel guidance** soft key.

## QUICK POI SELECTION

1. Touch the Map to display the additional options
2. Touch the **Point of interest** (POI) soft key.
3. The screen shows six suggested categories, 5 of which can be selected as quick points of interest.
4. Select a Quick POI category, or touch **More** to see further POIs. Touch **Ok** to confirm a selection.
5. The map with the POI icon(s) is displayed. Scroll the map to the POI icon, then touch **Set destination** to set and calculate route.
6. Touch **GO** to start journey.

## RESTORE SYSTEM DEFAULTS

From the navigation menu, select Nav set-up. If you have made any changes to the system's default settings, use this menu to restore the original settings.

## FAVOURITES

This enables you to manage destinations such as, place of work, home, favourite restaurant.

From the favourites sub menu in stored locations, you can save up to 400 stored favourites.

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Touch **Favourite**.
4. To store a favourite, select **Add** from the submenu.
5. Select any destination entry method and confirm desired location.