


## VIDEO MEDIA PLAYER CONTROLS

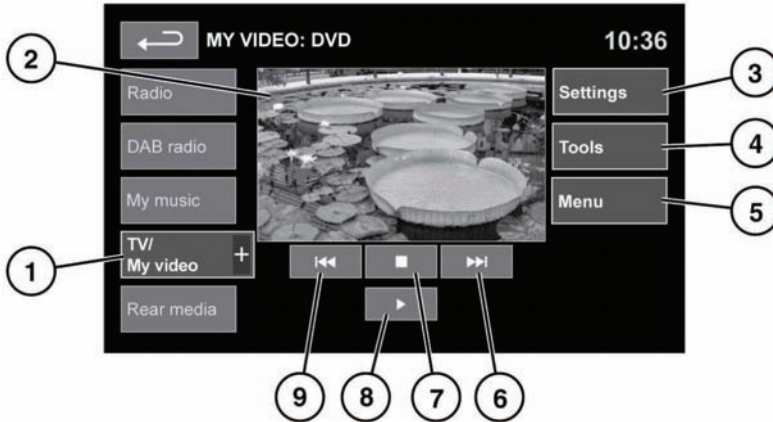

E141041

- 1. TV/My video:** TV band/video input selection.

Touch the + icon to view and select DVD or other forms of video media (CD/USB), provided the relevant media is present. The selected option will be displayed.

**Note:** After 5 seconds without use, the TV/My video menu will close.

- 2. Preview screen for video media information:** Touch to select full screen mode.  
Short touch the screen again to view the controls at any time.  
To return to preview mode, touch and hold the full screen view.
- 3. Settings.** Depending on the video media specification, there are 3 sub-menus within settings: **Options**, **VOD** (Video On Demand) and **Audio settings**.  
**VOD** allows playing of DivX VOD content from a video media. The eight digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See **139, LICENSING**.

- 4. Tools:** The following options can be selected:
  - **GOTO:** The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
  - Subtitles.
  - Angle.
  - Audio.
  - Top menu.
- 5. Menu:** Select to view the Video media menu. On some screens this may be replaced by a **Browse** soft key.
- 6. Seek up:** Select to view the next DVD chapter or to scroll through video media files.
- 7. Select to pre-stop playback.** A second touch will stop and reset the DVD.
- 8. Select to start/restart play.**
- 9. Seek down:** Select to view the previous DVD chapter or to scroll through video media files.