

## KEYLESS ENTRY

Keyless entry allows the vehicle to be opened if a Smart Key is within 1.0m (3ft) of the door handle or the tailgate external switch.

**Note:** *The Smart Key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), games console etc. Keep the Smart Key clear of such devices when attempting Keyless entry or Keyless starting.*

**Note:** *The Smart Key needs only to be on the driver's person or in a non-metallic bag or briefcase. It does not need to be exposed or handled.*

To enter the vehicle, just pull the door handle. The alarm will be disarmed and the doors unlocked according to the current unlock/entry setting (Single or Multi-Point). The hazard warning lamps will flash twice as 'unlock' confirmation. Power folded mirrors will fold out (if enabled).

**Note:** *If Single Point Entry is the current security setting and a door other than the driver's door is opened first, all doors will unlock.*

## DRIVE-AWAY LOCKING

Drive-away locking automatically locks all the doors when the vehicle is in motion. This feature can be enabled/disabled via the **Vehicle Set-Up** menu (see **62, INSTRUMENT PANEL**).

**Note:** *Pressing the lock or unlock button on the Smart Key will override drive-away locking for the current journey.*

## STEERING COLUMN LOCK

The electric steering column lock will lock/unlock when the vehicle is locked/unlocked.

If any malfunction of the steering column lock occurs, a message will be displayed in the message centre. If this occurs:

1. From the driver's seat, lock and then unlock the vehicle using the Smart Key.
2. Try again to unlock the steering column lock, by turning the steering wheel gently to the left and right while locking and then unlocking the vehicle using the Smart Key.
3. If the problem persists, seek qualified assistance.