


## INTERIOR LIGHTS

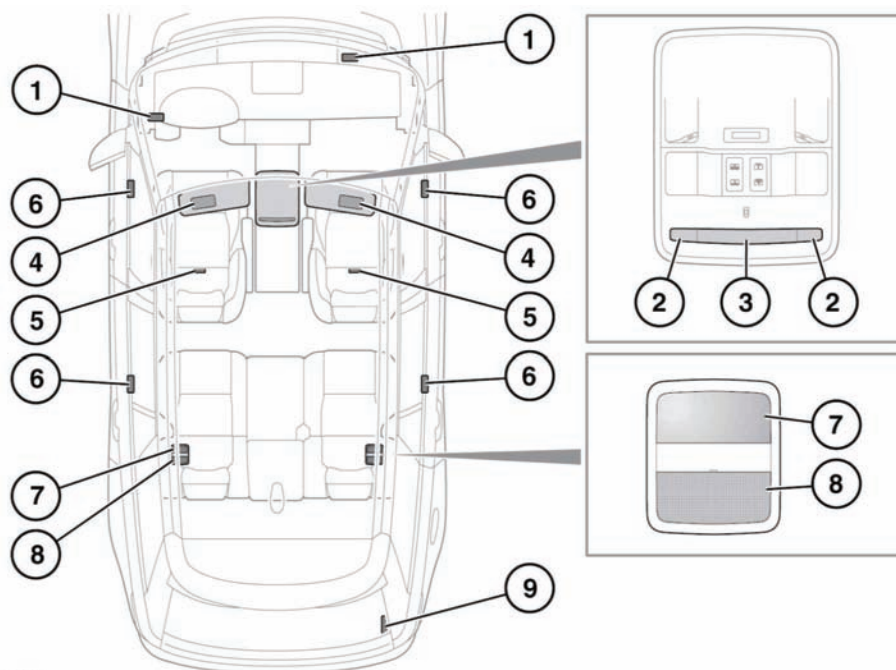

E142726

1. Front seat footwell lamps: Automatically illuminate when the doors are opened.  
Unless Auto mode is switched off.
2. Front reading lamps: Touch the left or right hand side of the sensor lens briefly to switch on/off.
3. Front courtesy lamp: Touch the centre of the sensor lens briefly to switch on/off or hold for approximately 5 seconds to switch automatic illumination on/off. The lamp will flash to confirm selection.  
In Auto mode the lamps will illuminate when a door is opened.
4. Vanity mirror lamp: Slide the cover open/shut for on/off.
5. Rear seat footwell lamps: Automatically illuminate when the doors are opened.
6. Puddle lamps: Automatically illuminate when the doors are opened.  
Unless Auto mode is switched off.
7. Rear reading lamps: Touch the lens briefly to switch on/off.
8. Rear courtesy lamps: Controlled by the settings of the front interior lamp.
9. Loadspace lamp: Automatically illuminates when the tailgate is opened.  
Unless Auto mode is switched off.