


INTERIOR LIGHTS

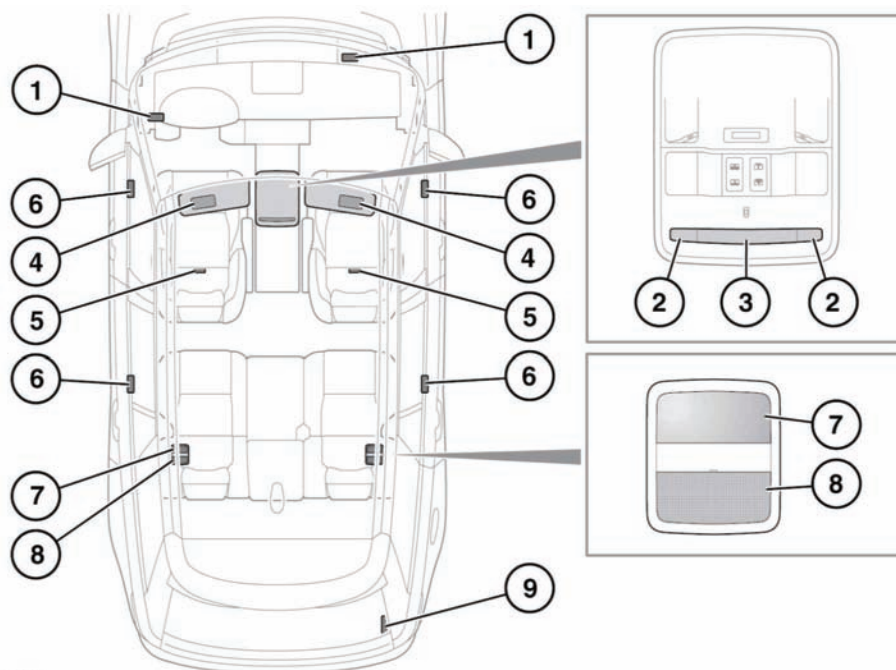

E142726

- 1. Front seat footwell lamps:** Automatically illuminate when the doors are opened.
Unless Auto mode is switched off.
- 2. Front reading lamps:** Touch the left or right hand side of the sensor lens briefly to switch on/off.
- 3. Front courtesy lamp:** Touch the centre of the sensor lens briefly to switch on/off or hold for approximately 5 seconds to switch automatic illumination on/off. The lamp will flash to confirm selection.
In Auto mode the lamps will illuminate when a door is opened.
- 4. Vanity mirror lamp:** Slide the cover open/shut for on/off.
- 5. Rear seat footwell lamps:** Automatically illuminate when the doors are opened.
- 6. Puddle lamps:** Automatically illuminate when the doors are opened.
Unless Auto mode is switched off.
- 7. Rear reading lamps:** Touch the lens briefly to switch on/off.
- 8. Rear courtesy lamps:** Controlled by the settings of the front interior lamp.
- 9. Loadspace lamp:** Automatically illuminates when the tailgate is opened.
Unless Auto mode is switched off.