


REAR CLIMATE CONTROL

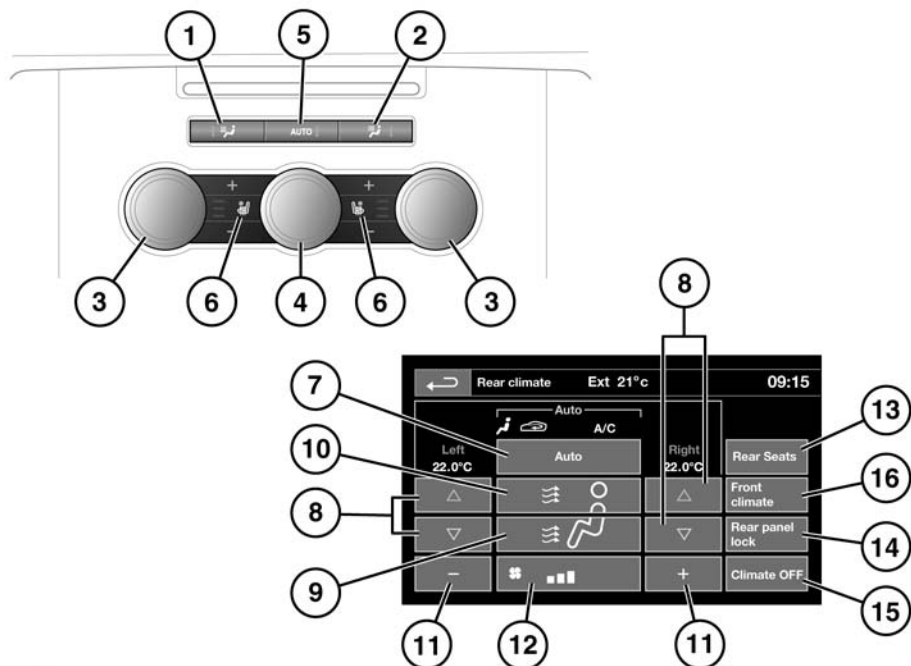

E143155

There are 2 types of rear climate control: 3 Zone and 4 Zone. All of the 3 zone controls will affect the whole of the rear passenger compartment. The 4 Zone allows independent control of each side.

To access the rear climate touch screen menu, select Rear climate from the front climate menu.

Note: When DEFROST is selected at the front, rear control is suspended until the defrost program ends.

There are also 2 types of seat cushion temperature controls.



Seat heat allows heating temperature control.



Climate seats allows heating and cooling temperature control.

Note: More than one setting at a time may be selected to achieve the desired air distribution.

1. Air distribution to feet. Press to switch on/off. Switch indicator illuminates when on.
2. Air distribution to face. Press to switch on/off. Switch indicator illuminates when on.
3. Temperature controls. Rotate to adjust between (16°C - 28°C [59°F - 83°F]). The temperature settings are displayed on the Touch screen, Rear climate menu.
4. Blower speed control. Rotate to adjust.

5. Press **AUTO** to select full auto mode operation. The system will adjust the heat output, blower speed, air intake and airflow distribution to maintain the selected temperature(s) without further adjustments. The air distribution and blower controls may be operated independently to override auto mode. If you do this, the indicator lamp on the switch will go out. Press again to return to full auto mode operation.
6. Seat heat/Climate seats temperature controls. Select the upper switch to increase and the lower switch to decrease. The 3 bar light display shows temperature status.
7. Touch to select **AUTO** mode on/off.
8. Temperature controls. Select the red arrow to increase and the blue arrow to decrease. The temperature settings are displayed above the arrows.
9. Air distribution to feet. Touch to switch on/off.
10. Air distribution to face. Touch to switch on/off.
11. Blower speed control. Touch left or right to adjust.
12. Blower speed indicator.
13. Touch **REAR SEATS** to adjust the Seat heat/Climate seats temperature settings.
14. Touch **REAR PANEL LOCK** to disable the rear climate control switches, to prevent the rear passengers from adjusting the rear climate settings. Select again to re-enable the controls.
15. Touch **CLIMATE OFF** to exit the Rear climate menu.
16. Touch **FRONT CLIMATE** to open the Front climate menu.

In addition to the selectable controls, the rear climate menu displays symbols that indicate the status of heating and ventilation functions.

Note: *If the climate control system is switched off, pressing a rear AUTO button will switch the climate control system on.*