


## PORTABLE MEDIA CONTROLS

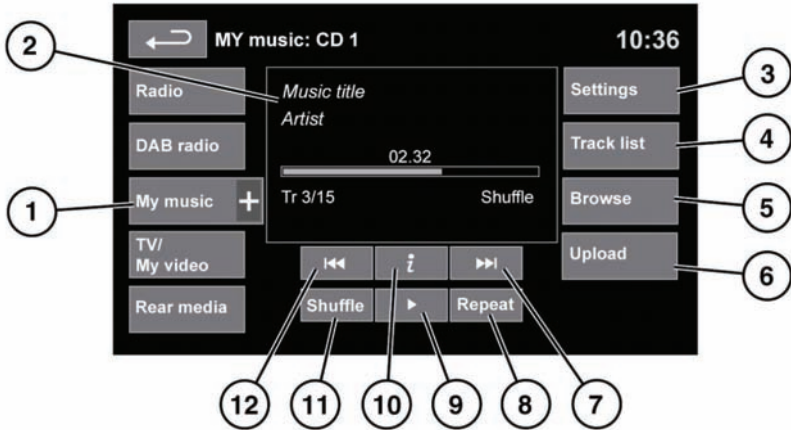

E141021

See **137, AUDIO/VIDEO CONTROLS.**

**My Music** includes CD, iPod, USB, AUX and Bluetooth devices. The full infotainment system also includes Stored CD.

1. Touch the **My Music** icon to display all options. Select an option.
 

*Note: Sound quality and volume levels available from devices connected to the auxiliary input may vary widely.*
2. Display of information about the current track, including elapsed run-time. Some of this information is also displayed in the instrument panel.
 

*Note: Only connected devices that support ID3 shall have the information displayed.*
3. **Settings:** Select to switch traffic and news announcements on or off. Additionally, for MP3 recorded media, you can select the number of list entries that are skipped when you use the page up/down arrows when navigating a list.
4. **Track list.** Select to view current CD or Stored CD track list. Select a track to start playback.

5. **Browse.** (iPod, USB and Stored CD modes only).

- Select to view the contents of the connected device which are displayed as dictated by the file structure.
- Select a file to start playback (Browse view will remain). Select a folder or subfolder to view their contents.
- To return to the Controls menu, select the Back soft key.

*Note: If the iPhone is connected via a USB cable so that Audio can be played or for phone charging, Bluetooth Audio is disconnected.*

6. **Upload:** Applicable to Stored CD menu only.

Select to view and manage the CDs loaded onto the CD store.

- Select **Upload** alongside an empty slot to upload the current CD. There are 10 slots available.
- If the CD store is full, select **Replace** to overwrite an existing CD.