
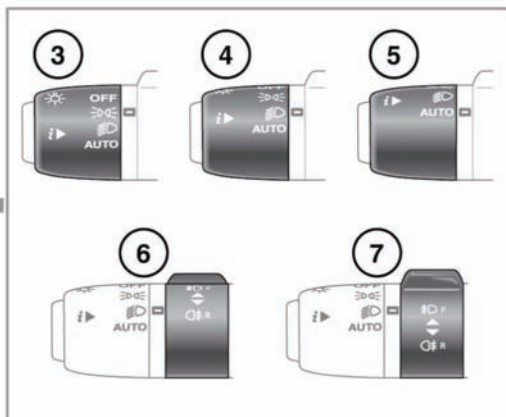


LIGHTING CONTROL

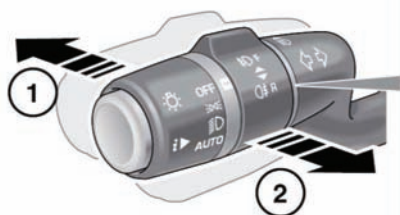

E139137

1. With the headlamps on, push the control away from the steering wheel to select high beam. The warning lamp will illuminate. See **60, HIGH BEAM (BLUE)**.
***Note:** Do not use high beam where it may distract or dazzle other road users.*
2. Pull the control towards the steering wheel and release to flash the high beam on and off. The high beam will remain on for as long as the switch is held.
3. Side lights.
4. Headlamps.
5. **AUTO**. With Auto lamps selected, when ambient light fades and the ignition is on, the side lights, tail lamps, low beam headlamps and licence plate lamps will switch on automatically. Headlamp courtesy delay, High beam assist and Windscreen wiper detection may also be activated.
6. Rear fog lamps. Operates only while side lights, headlamps or Auto lamps are selected. Turn the collar towards the steering wheel and release. The warning lamp will illuminate. See **59, REAR FOG LAMP (AMBER)**.
7. Front fog lamps. Operates only while side lights, headlamps or Auto lamps are selected. Turn the collar away from the steering wheel and release. The warning lamp will illuminate. See **60, FRONT FOG LAMPS (GREEN)**.

***Note:** Low ambient light levels, caused by adverse weather conditions, may also cause Auto lamps to activate.*