

## Adaptive cruise control

- Press the gap increase button to display the current setting in the message centre and then press again to increase the sensitivity of the alert.

**FWD ALERT <---->** is displayed in the message centre.

**Note:** The Forward alert set gap is retained when the ignition is switched off.

### ADVANCED EMERGENCY BRAKE ASSIST

- ❗ The system may not react to slow moving vehicles and will not react to stationary vehicles or vehicles travelling in the opposite direction.
- ❗ Warnings may not appear if the distance to the vehicle ahead is very small or if steering wheel or pedal movements are large (e.g. to avoid a collision).
- ❗ The system utilises the same radar sensor as Advanced cruise control and Forward alert - the same limitations of performance apply.

When Adaptive cruise control is fitted, Advanced emergency brake assist is available at speeds above approximately 7 km/h (5 mph) and will function even if Forward alert and Adaptive cruise control are switched off. It improves braking response during emergency braking, when a moving vehicle is detected close ahead.

If the risk of collision increases after the **FORWARD ALERT** warning is displayed, Advanced emergency brake assist is activated. The brakes are automatically applied gently in preparation for rapid braking (this may be noticeable). If the brake pedal is then pressed quickly, full braking is implemented, even if only light pressure is applied to the pedal. See **109, EMERGENCY BRAKE ASSIST (EBA)**.

**Note:** Braking performance will only be improved if the driver applies the brakes.

If there is a fault with the system, **FORWARD ALERT UNAVAILABLE** is displayed in the message centre. The vehicle can still be driven and the braking system will still operate, but without Advanced emergency brake assistance. Consult a Land Rover Dealer/Authorised Repairer to have the fault rectified.