VOICE SETTINGS

- **Command list**: View the categories and the acceptable voice commands.
 - Select an **Information** button to view alternative function commands.
- Voicetags: View the categories. Select a category to manage the voicetags for the chosen system. See 102. VOICETAGS.
- Operating guide: View brief Voice system instructions. Select Voice tutorial for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the voice button).
- Preferences: Select to alter the following settings:
 - Voice profile: The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is Standard. To build a voice profile for either User 1 or User 2, it is necessary to complete a training program first.

To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.

- Voice feedback: Select On/Off.
- Feedback volume: Adjust using the +/buttons. It is not possible to reduce the volume to zero.
- Voice training: Select to access the voice system training program, designed to enable the system to better recognise the vocal characteristics of a user.

Select **User 1** or **User 2** and follow the on screen and audible instructions. See **102**, **VOICE TRAINING**

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See 101, USING VOICE CONTROL

SELECTING VALET MODE

Valet mode allows the vehicle to be locked by a parking attendant. Valet mode prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

- 1. From the Home menu, select Valet.
- 2. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
- **3. Valet on** is displayed to indicate that the PIN has been accepted.
- Valet mode activated is displayed to indicate that the PIN has been accepted.

Valet mode On screen is displayed.

DESELECTING VALET MODE

- **1.** When you re-enter the vehicle, select the Valet mode screen.
- Enter your four digit PIN and touch the OK button.

Valet mode deactivated is displayed to indicate that your PIN has been accepted.

The touch screen will be enabled.

Note: If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.