


## RADIO CONTROLS

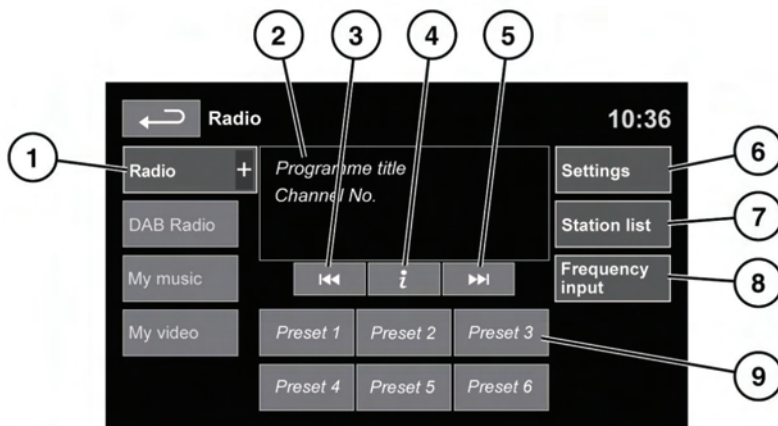

E145638

1. **Radio:** Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.  
The waveband selection box will close automatically after 5 seconds without use.
2. Displays information about the current station.
3. Seek down:
  - Short touch to auto seek down the frequency to the next radio station.
  - Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.
4. Information. More information from the broadcasting station.
5. Seek up:
  - Short touch to auto seek up the frequency to the next radio station.
  - Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
6. **Settings:** Touch to view and activate/deactivate the following features: **RDS, Traffic, News, AF** and **REG**. See **123, RADIO DATA SYSTEM (RDS)**.
7. **Station list (FM only):** Select to view a list of available stations on the waveband. The list can be sorted by **Frequency, Name** or **PTY** (pop, news, sport etc.) by selecting the appropriate soft key. Touch to select the chosen station.  
If the stations are sorted by category, touch the chosen category to view and select a corresponding station.  
**Autostore (AM only):** Select to store up to 6 of the strongest stations on the AM waveband.