

Short press:

- To select the next radio preset.
- To select the next track on chosen audio source - CD, MP3 etc.
- when telephone is in use, press to scroll up lists of calls or phonebook entries.
- To select the next DVD chapter.

Long press:

- To auto seek up the frequency to the next radio station.
9. Press to decrease volume for any source.
  10. **MODE**. Press repeatedly to scroll through all audio/video sources.
  11. Seek down:

Short press:

- To select the previous radio preset.
- To select the previous track or start of current track on chosen audio source - CD, MP3 etc.
- When telephone is in use, press to scroll down lists of calls or phonebook entries.
- To select the previous DVD chapter.

Long press:

- to auto seek down the frequency to the next radio station.
12. Menu navigation control: Rotate to scroll through menu items.
  13. Seek up: Short press to auto-seek to the next radio station or next track on chosen audio source.
    - Long press to activate manual-seek, scan forwards through a track.
  14. Seek down: Short press to auto-seek to the previous radio station or previous track on chosen audio source.
  15. Press to display the Tone menu.

## AUDIO SETTINGS


To view the audio settings menu, press the **Audio settings** soft key on the touch screen.

To adjust the sound settings:

1. Touch the **+** or **-** soft keys to adjust Bass, Treble or Subwoofer levels.
2. If surround sound is fitted, touch **DPLIIx**, **DTS Neo:6**, **Meridian Trifield** or select **Stereo** to switch surround sound off.

**Note:** Surround sound options are not available for certain sources where the surround sound mode is set automatically.

To adjust balance and fade:

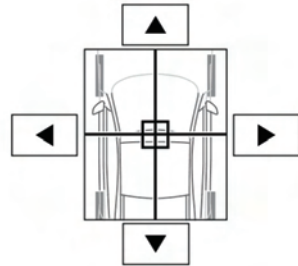

E132537

1. From the Sound settings menu, select **Balance/Fade**.
2. Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle. Alternatively, touch the sound focal point and 'drag' it to the required position.

## LOADING DISCS



Do not force the disc into the slot.

Do not use irregular shaped CDs or DVDs and those with a scratch protection film or self-adhesive label attached.