


## VIDEO MEDIA PLAYER CONTROLS

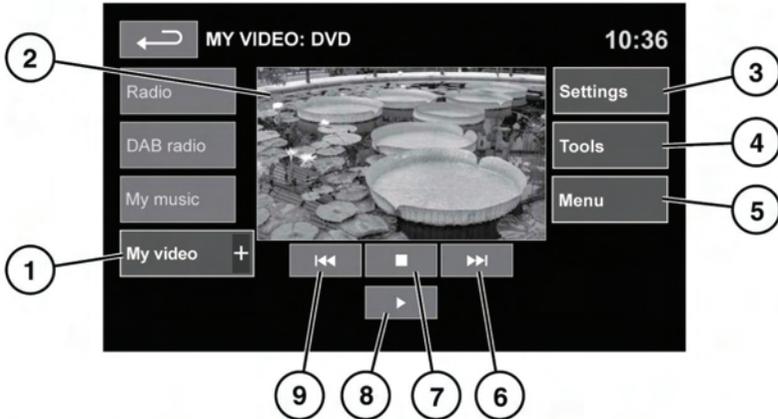

E145641

### 1. **My video:** Video input selection.

Touch the + icon to view and select DVD or other forms of video media (CD/USB), provided the relevant media is present. The selected option will be displayed.

**Note:** After 5 seconds without use, the My video menu will close.

### 2. Preview screen for video media information: Touch to select full screen mode.

Short touch the screen again to view the controls at any time.

To return to preview mode, touch and hold the full screen view.

### 3. **Settings.** Depending on the video media specification, there are 3 sub-menus within settings: **Options**, **VOD** (Video On Demand) and **Audio settings**.

**VOD** allows playing of DivX VOD content from video media. The eight digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See **86, LICENSING**.

### 4. **Tools:** The following options can be selected:

- **GOTO:** The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
- Subtitles.
- Angle.
- Audio.
- Top menu.

### 5. **Menu:** Select to view the Video media menu. On some screens this may be replaced by a **Browse** soft key.

### 6. **Seek up:** Select to view the next DVD chapter or previous chapter of the video media.

### 7. **Seek down:** Select to view the previous DVD chapter or previous chapter of the video media.

### 8. **Play/Pause:** Select to start/restart play.

### 9. **Stop:** Select to stop playback. A second touch will stop and reset the DVD.