


## MANUAL CLIMATE CONTROL

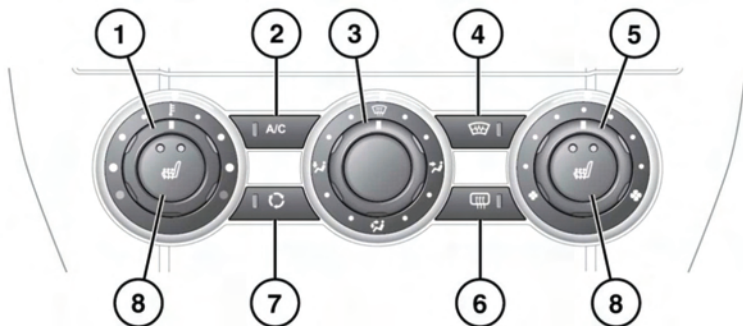

E145960

1. Temperature control, rotate to adjust.
2. Air conditioning. Press to switch on/off.
3. Air distribution, rotate to direct air flow.
4. Heated front screen, press to switch on/off.
5. Blower speed, rotate to adjust air flow speed through the vents. Current speed selection is indicated by an illuminated LED.
6. Heated rear screen, press to switch on/off.
7. Recirculation:
  - Press briefly to turn on recirculation for four minutes or to turn it off.
  - Press and hold to turn on recirculation until it is turned off.
8. Seat heaters. Press once to turn on high, twice to turn on low, and a third time to turn off.

**Note:** The amber tell-tale indicators in the switches will illuminate when the function is selected.

**Note:** In low temperatures it is advisable to close the centre face level vent, and direct air flow from the outer face level vents towards the side windows. This will help to keep the windows clear of ice.