

It is not possible to manually reset the Auto trip memory. This resets automatically each time the ignition is switched on.

Trips may be added together, to record a continuous journey, or removed. Press the **i** button for longer than 1 second, when Auto trip memory values for distance, average speed or average fuel economy are displayed, then **adding last journey** or **removing last journey** will appear on the screen. Press the **i** button for longer than 1 second, and the previous trip information will be added to or removed from the current trip and the new total will be displayed.

## TRIP DISTANCE

Distance travelled since the last memory reset. The maximum trip reading is 9 999.9 (kilometres or miles). The computer will automatically reset to zero if this distance is exceeded.

## RANGE

This shows the predicted distance (kilometres or miles) that the vehicle should travel on the remaining fuel, assuming fuel consumption stays constant.

## METRIC/IMPERIAL/MIXED DISPLAY

The trip computer readings can be changed between metric, imperial and mixed units via **Trip Computer** in the Instrument panel menu. See **43, INSTRUMENT PANEL MENU**.

**Note:** *Temperature display can be changed between °C (Celsius) and °F (Fahrenheit) independently of Metric or Imperial units.*

## SERVICE INTERVAL INDICATOR

An upcoming service interval will be notified to the driver via the Message centre, as either a distance or time left until service is due. Once the distance or time are exceeded, the display will show a negative value (-) to indicate that a service is overdue.

One or both types of service interval (distance and time) may be displayed.