

DIRECTION INDICATOR BULB REPLACEMENT

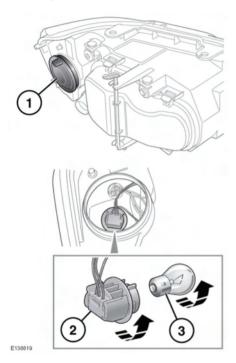

- 1. Remove the cover.
- 2. Twist the indicator bulb holder, and remove it from the lamp unit.
- **3.** Press the bulb into the holder, then twist it and remove.

FRONT FOG LAMP BULB REPLACEMENT

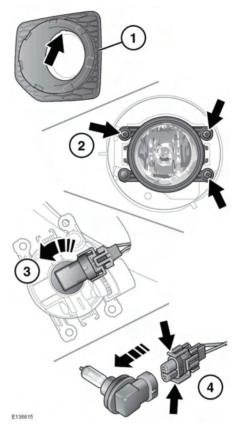

- 1. Using the slot at the top of the lamp surround, lever out with a suitable implement to remove.
- 2. Undo the three retaining screws, and remove the lamp unit.
- **3.** Rotate the bulb holder (anticlockwise) and remove from the lamp unit.
- **4.** Press the two clips together, and remove the electrical connector.