

## Parking aids


The front sensors will remain active as long as the vehicle's forward speed does not exceed 16 km/h (10 mph).

Selecting **N** from **R** will keep front and rear sensors active.

When objects are detected, the parking aid emits a warning tone which increases in frequency as the vehicle gets closer to the object and then becomes constant when the obstacle is within 300 mm (12 inches).

**Note:** *The front parking aid provides an audible proximity warning when driving forwards and when reversing.*

### CLEANING THE SENSORS


 When washing the vehicle do not aim high pressure water jets directly at the sensors. Do not use abrasive materials or hard/sharp objects to clean the sensors. Only use approved vehicle shampoo.


The sensors should be kept clean to maintain accuracy and performance.

### PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, and the switch indicator will flash. Contact your Dealer/ Authorised Repairer as soon as possible.

### REAR CAMERA

 **It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.**

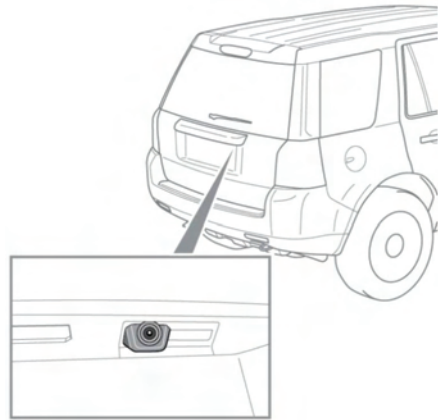

E145761


When reverse gear is selected, the screen automatically displays a wide angle, colour image from the rear of your vehicle.

The rear view camera system provides a rear view image to assist in reversing the vehicle. Overlaid on the image are reversing guidelines.

Rear view camera display on the touch screen will discontinue when either of the following apply:

- Drive is selected for longer than 5 seconds.
- Drive is selected and/or vehicle speed is greater than 18 km/h (11 mph).

To adjust the camera settings while in reverse, touch anywhere on the touch screen to display the user options.

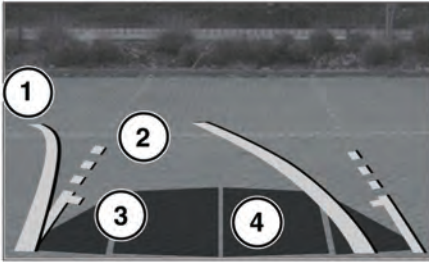

E145190

1. Solid line: The projected path based on current steering wheel position.
2. Dotted line: The safe working width of the vehicle (including exterior mirrors).
3. Tailgate access guideline: Do not reverse beyond this point if tailgate access is required.
4. Parking sensor activation: A coloured area appears, to indicate which rear sensor(s) has been activated.
5. User option. Touch to enable/disable (1), (2) and (3).
6. User option. Touch to enable/disable (4) Parking sensor.
7. User option. Touch to enable/disable Hitch Assist guidance lines.