

2. Passenger compartment fuse box.
  - Open the glove box. See **55, STORAGE COMPARTMENTS**.
  - Lower the glove box by lightly pushing in at each support stay at the top of the left-hand and right-hand corners.
  - Lightly push in the thumb catch at the top of the support strut. Lift and lightly pull away to release the top of the strut.
  - Remove the glove box by lightly pulling towards the rear of the vehicle to release it from the lower clips.
  - Lift up the flap in the insulation material to access the fuse board.
  - A label on the rear of the glove box will show the fuse numbers and positions.
3. Luggage compartment fuse box.
  - The fuse numbers and positions are shown on the inside of the fuse box cover.

## CHANGING A FUSE



Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.



If the replacement fuse blows after installation, the system should be checked by a Land Rover Dealer/Authorised Repairer.

**Note:** Land Rover recommend that relays should only be replaced by qualified personnel.

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.

**Note:** Spare fuses and a puller are located in the passenger compartment fuse box.

## ENGINE COMPARTMENT FUSE BOX

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F1	-	-	-
F2	5	tan	Voltage module
F3	80	clear	Cooling fans
F4	60	blue	Glow plugs (diesel only)
F5	-	-	-
F6	15	blue	Engine management. Oxygen sensors
F7	5	tan	Relays
F8	20	yellow	Engine management
F9	10	red	Engine management
F10	15	blue	Automatic transmission
F11	10	red	Engine management
F12	15	blue	Engine management
F13	10	red	Air conditioning

# Fuses

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F14	15	blue	Engine management. Air conditioning
F15	40	orange	Starter motor
F16	100	violet	Electric booster heater (diesel only)
F17	60	blue	Passenger compartment fuse box supply
F18	60	blue	Passenger compartment fuse box supply
F19	60	blue	Luggage compartment fuse box supply. Audio system
F20	60	blue	Luggage compartment fuse box supply
F21	60	blue	Luggage compartment fuse box supply
F22	30	green	Windscreen wipers
F23	40	orange	Passenger compartment fuse box supply
F24	-	-	-
F25	30	green	Anti-lock Braking System (ABS)
F26	40	orange	ABS
F27	40	orange	Passenger compartment fuse box supply
F28	40	orange	Heater blower
F29	-	-	-
F30	15	blue	Headlamp washer
F31	15	blue	Horns
F32	20	yellow	Auxiliary heater (diesel only)
F33	5	tan	Relays
F34	40	orange	Heated windscreen (left-hand)
F35	40	orange	Heated windscreen (right-hand)