

2. Passenger compartment fuse box.

- Open the glove box. See **55, STORAGE COMPARTMENTS**.
- Lower the glove box by lightly pushing in at each support stay at the top of the left-hand and right-hand corners.
- Lightly push in the thumb catch at the top of the support strut. Lift and lightly pull away to release the top of the strut.
- Remove the glove box by lightly pulling towards the rear of the vehicle to release it from the lower clips.
- Lift up the flap in the insulation material to access the fuse board.
- A label on the rear of the glove box will show the fuse numbers and positions.

3. Luggage compartment fuse box.

- The fuse numbers and positions are shown on the inside of the fuse box cover.

CHANGING A FUSE



Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.



If the replacement fuse blows after installation, the system should be checked by a Land Rover Dealer/Authorised Repairer.

Note: Land Rover recommend that relays should only be replaced by qualified personnel.

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.

Note: Spare fuses and a puller are located in the passenger compartment fuse box.

ENGINE COMPARTMENT FUSE BOX

| Fuse number | Rating (Amps) | Fuse colour | Circuits protected |
|-------------|---------------|-------------|--------------------------------------|
| F1 | - | - | - |
| F2 | 5 | tan | Voltage module |
| F3 | 80 | clear | Cooling fans |
| F4 | 60 | blue | Glow plugs (diesel only) |
| F5 | - | - | - |
| F6 | 15 | blue | Engine management. Oxygen sensors |
| F7 | 5 | tan | Relays |
| F8 | 20 | yellow | Engine management |
| F9 | 10 | red | Engine management |
| F10 | 15 | blue | Automatic transmission |
| F11 | 10 | red | Engine management |
| F12 | 15 | blue | Engine management |
| F13 | 10 | red | Air conditioning |

Fuses

| Fuse number | Rating (Amps) | Fuse colour | Circuits protected |
|-------------|---------------|-------------|---|
| F14 | 15 | blue | Engine management. Air conditioning |
| F15 | 40 | orange | Starter motor |
| F16 | 100 | violet | Electric booster heater (diesel only) |
| F17 | 60 | blue | Passenger compartment fuse box supply |
| F18 | 60 | blue | Passenger compartment fuse box supply |
| F19 | 60 | blue | Luggage compartment fuse box supply. Audio system |
| F20 | 60 | blue | Luggage compartment fuse box supply |
| F21 | 60 | blue | Luggage compartment fuse box supply |
| F22 | 30 | green | Windscreen wipers |
| F23 | 40 | orange | Passenger compartment fuse box supply |
| F24 | - | - | - |
| F25 | 30 | green | Anti-lock Braking System (ABS) |
| F26 | 40 | orange | ABS |
| F27 | 40 | orange | Passenger compartment fuse box supply |
| F28 | 40 | orange | Heater blower |
| F29 | - | - | - |
| F30 | 15 | blue | Headlamp washer |
| F31 | 15 | blue | Horns |
| F32 | 20 | yellow | Auxiliary heater (diesel only) |
| F33 | 5 | tan | Relays |
| F34 | 40 | orange | Heated windscreen (left-hand) |
| F35 | 40 | orange | Heated windscreen (right-hand) |