
FUSE BOX LOCATIONS

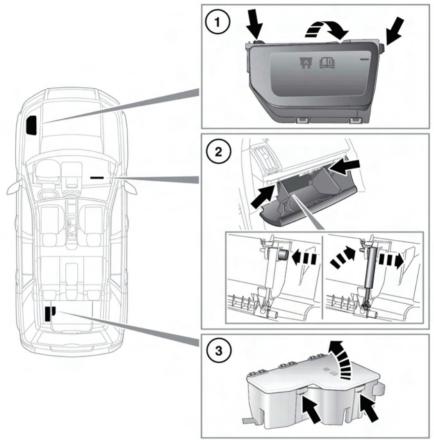

E145595

- When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.
- 1. Engine compartment fuse box.
 - The fuse numbers and positions are shown on the inside of the fuse box cover.