

HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent Stop/Start system.

Note: Other warnings normally associated with an engine shutdown, for example the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent Stop/Start system.

SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

HILL DESCENT CONTROL (GREEN)



Illuminates continuously when HDC is selected and HDC operating conditions are met. See

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.

CRUISE CONTROL (GREEN)



Illuminates when cruise control or Adaptive cruise control is active.

TRAILER DIRECTION INDICATORS (GREEN)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.