
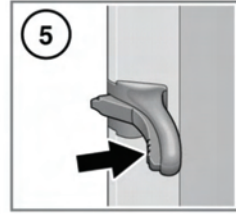
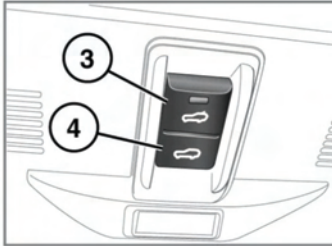
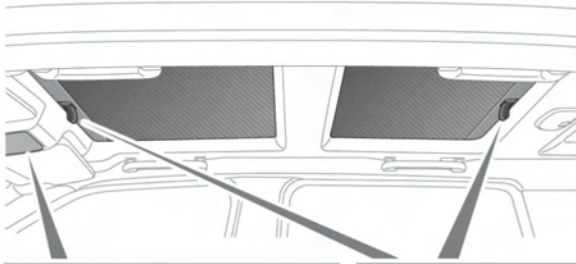


## ELECTRIC WINDOWS

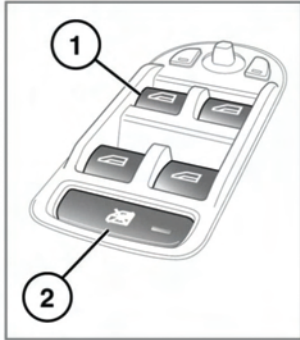

E147274

### 1. Window switches.

**Note:** The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

### 2. Rear window isolator button.



**If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.**

### 3. Sunroof close/tilt switch:



Wherever possible remove any snow, ice, dirt, and leaves etc. from the sunroof mechanism before closing. Failure to do so may damage the sunroof mechanism.

- With the roof closed, briefly press to tilt the sunroof open.
- With the roof fully open, briefly press to close the roof.

Press the button again to stop movement.

### 4. Sunroof open/close switch:

- With the roof closed, briefly press to fully open. Press again to stop movement.
- With the roof tilted open, press and hold to close the roof. Releasing the switch will stop roof movement.

**Note:** The sunroof will operate for 30 seconds after the ignition is turned off, provided that a front door is not opened.

### 5. Sun blind:

- To open, push upwards on the textured part of the handle. Then, slide the blind into the panel between the sunroof and the headlining.
- To close the sun blind, pull across the aperture until it locks in place.