 
 
TOUCH SCREEN USE





TOUCH SCREEN DISPLAY ICONS

Touch screen display icons are as follows (they may not all be displayed at the same time):



Audio/Video: Touch to select the Audio/Video menu.



Phone: Touch to select the Phone menu.



Navigation: Touch to select the Navigation menu.



Back soft key: Touch to return to the previous screen displayed.

TOUCH SCREEN CARE



Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/ Authorised Repairer.

TOUCH SCREEN SETUP

Select Set-up from the Home menu.

The setup screen is divided into categories:

- Screen
- System
- Voice
- Audio

SCREEN SETTINGS

Volume pop-up: Display Volume pop-up on/off.

Screensaver: Change screensaver.

Time out home: Sub menu selection screens can be set to revert to the **Home** menu after a pre determined length of time.

Theme: Changes appearance of the touch screen soft keys.

SYSTEM SETTINGS

Button feedback: Select to turn the soft key confirmation tone on/off.

Clock adjust: Select 12 or 24 hour clock. Set current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store new settings.

Note: The clock can also be adjusted from the touch screen time display.

Home menu shortcuts: Select up to two items from the displayed list to appear as shortcuts on the **Home menu**. Select **Clear** to deselect highlighted items.

Language: Select the required language. Select Male or Female voice. Touch Change to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

Note: Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.

Volume presets: Adjust volume for the available systems (announcements, parking aid, phone, voice etc.).