


## HEADLAMP REMOVAL

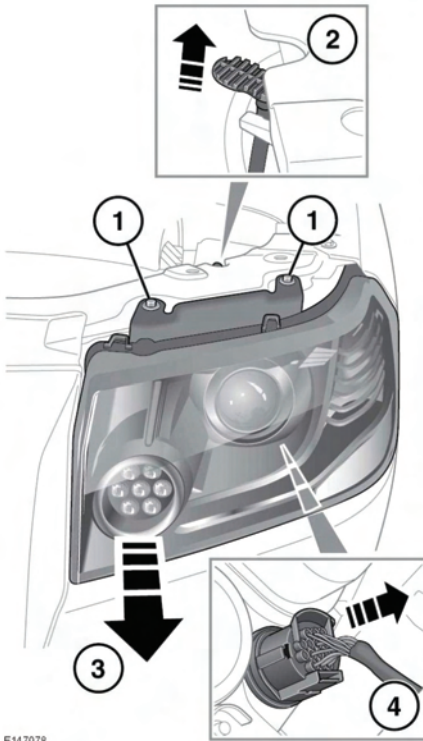


E147078

**!** Do not place the removed lamp unit face down on hard or abrasive surfaces. Doing so may scratch the surface of the lens.

1. Undo and remove the two retaining bolts.
2. Pull up the locking lever to release the headlamp unit.
3. Pull the headlamp unit forward to allow access to the rear of the unit.
4. Disconnect the electrical connector from the back of the unit by pressing the tab and pulling the connector.

## HEADLAMP BULB IDENTIFICATION

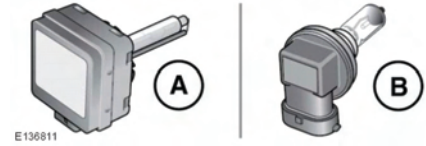

- A. Xenon bulb.  
B. Halogen bulb.

## HALOGEN BULBS

Dependent on vehicle specification, halogen bulbs may be used for high beam, low beam, and front fog lamps. Take care not to touch the glass part of the bulb with your fingers; always use a cloth to handle the bulb. If necessary use methylated spirits to remove finger prints.

## XENON LAMPS

- !** Replacement or maintenance of Xenon lamps should only be carried out by suitably qualified personnel.
- !** High voltage is required to ignite the gas and metal vapour which are used to power Xenon lamps. Contact with this voltage can cause serious injury.
- !** Xenon lamp units operate at a very high temperature. Ensure that the lamp units have cooled before attempting to touch them.
- !** Xenon lamp units contain Mercury which is highly toxic and can be extremely harmful.



Seek advice about the correct disposal of Xenon lamp units from a Land Rover Dealer/Authorised Repairer, or your local authority.