


AUTOMATIC CLIMATE CONTROL

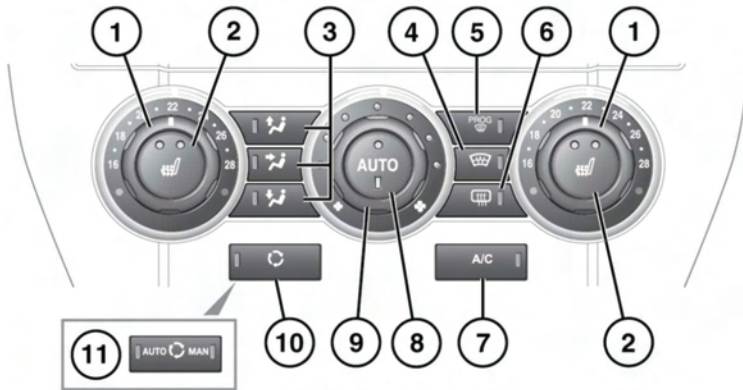

E145981

1. Left and right temperature controls, rotate either control to adjust.
Note: It is not possible to achieve a temperature differential of more than 4°C (7°F) between the left and right.
2. Seat heaters. Press once to turn on high, twice to turn on low, and a third time to turn off.
3. Air distribution. Press the relevant button to set the air distribution to the required points. It is possible to select more than one option by pressing the required combination of buttons.
4. Heated front screen, press to switch on/off.
5. Maximum defrost program, press to switch on/off. The system will automatically adjust the blower output for maximum clearing. In addition the front and rear screen heaters will be activated.
6. Heated rear screen, press to switch on/off.
7. Air conditioning, press to switch on/off.
8. AUTO mode, press to select fully automatic operation.
9. Blower speed, rotate to adjust air flow speed through the vents. In manual mode current speed selection is indicated by an illuminated LED.
10. Recirculation:
 - Press briefly to turn on recirculation for four minutes or to turn it off.
 - Press and hold to turn on recirculation until it is turned off.
11. Air quality sensor: press repeatedly to toggle between:-
 - Automatic - System automatically selects fresh air, or recirculation, depending on the levels of humidity and pollution present.
 - Manual - System locked to recirculation.
 - Off - System locked to fresh air intake.

Note: The amber tell-tale lights in the switches will illuminate when the function is selected.

Note: In low temperatures it is advisable to close the centre face level vent, and direct air flow from the outer face level vents towards the side windows. This will help to keep the windows clear of ice.