


## TELEPHONE SYSTEM OVERVIEW

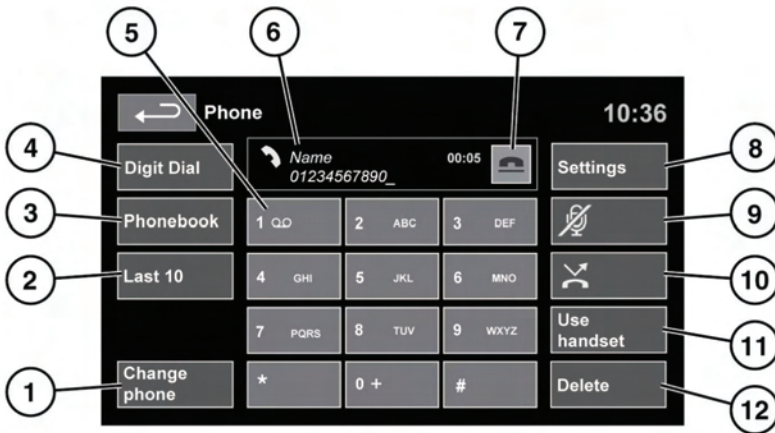

E141184

1. **Change phone.** Search new or change to another paired phone.
2. **Last 10.** Access the last 10 dialed, received and missed calls.
3. **Phonebook.** Access the downloaded phonebook.
4. **Digit Dial.** Access Digit Dial mode.
5. Touch and hold to retrieve your Voice mail.
6. **Status display:** Displays the name and/or number dialed and call duration.
7. **Call Connect/Disconnect icons.** Touch to send/accept or end/reject a call.
8. **Settings.** Access Voice mail set up, Answer options and Phone options.
9. **Mute microphone.** Initiate Privacy mode. While selected, the caller will not hear you talking.
10. **Auto reject.** When active, any incoming calls will be rejected or diverted to voice mail (depending on mobile phone settings).
11. **Use handset.** Switch the call to your mobile phone.
12. **Delete.** Touch to delete the last entered digit, and hold to delete the whole entered number.

## BLUETOOTH® INFORMATION



Bluetooth® is the name for short-range radio frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Land Rover Bluetooth® system supports Bluetooth® Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

**Note:** HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via one, while a media device can be connected via the other, at the same time.