


## TOUCH SCREEN HOME MENU

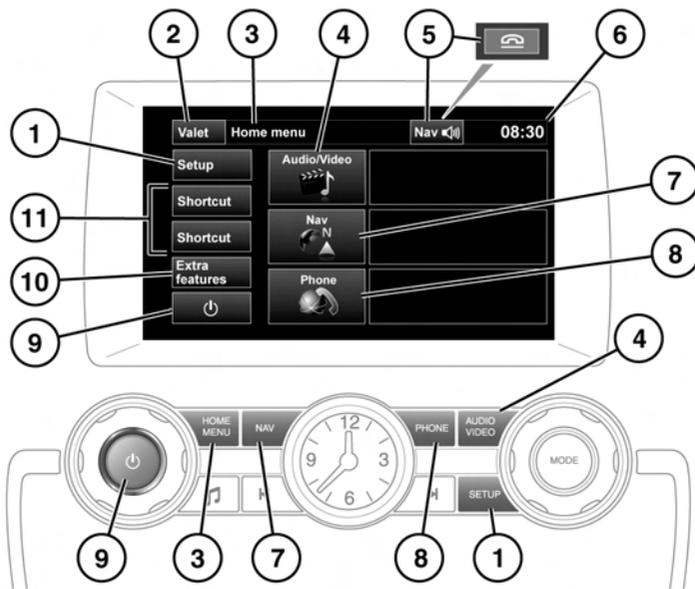

E145488

1. Touch to select the touch screen **Setup** menu.
2. Touch to select **Valet** mode. During menu mode, the icon is changed to the back soft key, touch to return to the previous screen displayed
3. Press to select the **Home menu**.
4. Touch or press to select the **Audio/Video** menu. See **84, AUDIO/VIDEO CONTROLS**.
5. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed. Touch to end the call.
6. Touch to adjust time/date.
7. Touch or press to select the **On road Navigation** menu. Current set destination is displayed.
8. Touch or press to select the **Phone** menu.
9. Press to turn on/off the screen.
10. Press to select the **Extra features** menu.
11. Touch to select Home menu shortcuts. See **82, TOUCH SCREEN SETUP**.

## TURNING OFF THE TOUCH SCREEN

1. Press the screen on/off button once to activate the screensaver (see **81, TOUCH SCREEN HOME MENU**). If the screensaver has not been set, a single press will turn off the touch screen.
2. Press the screen on/off button twice to turn off the touch screen.
3. To turn on the touch screen, press the screen on/off button.