

Exterior lights

- The parking brake is not applied (is released) - market dependent.



Unless required or prohibited by law, daytime running lamps can be disabled or enabled by your Land Rover Dealer/Authorised Repairer.

HEADLAMP COURTESY DELAY

This feature operates whenever the lamps master switch is in the AUTO (5) position and the ignition is turned off. The headlamps will remain illuminated for up to 240 seconds.


Note: The time delay may be changed via the Vehicle settings menu. See **44, WARNING AND INFORMATION MESSAGES**.

Courtesy lamps can be switched off at any time by pressing the headlamps button on the Smart Key.

HEADLAMPS - CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.

HEADLAMPS - DRIVING ABROAD

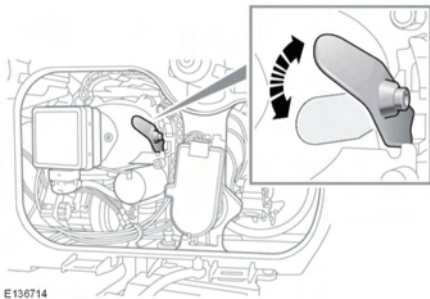


Note: The headlamps must be removed in order to change the beam pattern. See **147, HEADLAMP REMOVAL146, CHANGING A BULB**.

The tourist lever allows you to adjust the headlamps to the correct beam pattern for driving on the left or right hand side of the road.

When new, the lever will be set to the correct position for the country in which the vehicle is sold. To change the pattern for driving on the alternate side of the road, move the lever to the alternate position.

Note: When changing the beam pattern using the lever, ensure that you change the lever position on both headlamps.

HEADLAMP LEVELLING

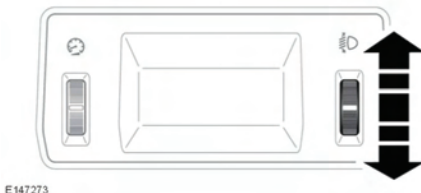

Use the headlamp levelling control to account for vehicle loading changes.

| Vehicle load | Switch position |
|------------------------------------|-------------------------------------|
| Driver only | 0 |
| Driver and front seat passenger | 0 |
| Driver and passengers in all seats | Rotate down one position from 0. |
| Maximum gross vehicle weight | Rotate down two positions from 0. |
| Maximum rear axle load | Rotate down three positions from 0. |