
## REAR LAMP BULB REPLACEMENT

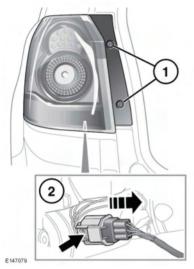


- 1. With the tailgate open, remove the two screws from the inner edge of the unit.
- Pull the unit carefully away from the vehicle, disconnect the electrical connector and remove the unit from the vehicle
- 3. Direction indicator.
- 4. Stop/tail lamp.


**Note:** This is an LED lamp. Repair or replacement should only be carried out by qualified personnel.

- 5. Reversing lamp
- 6. Rear fog lamp.

Twist the relevant bulb unit and pull to access the bulb. Push, twist and pull to remove the bulb.

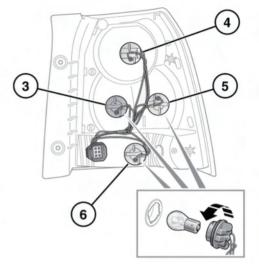

## SIDE REPEATER LAMP BULB REPLACEMENT

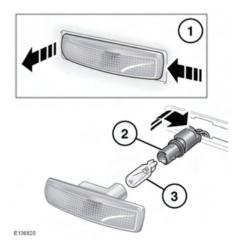

Follow the steps illustrated. Insert a new bulb and refit the components.