

## DRIVER CONTROLS

1. Map reading lamp switch **(33)**.
2. Main interior lamp switch **(33)**.
3. Passenger airbag warning lamp **(28)**.
4. Sunroof switches **(34)**.
5. Lighting/direction indicator/trip computer **(31/44)**.
6. Audio controls **(84)**.
7. Instrument panel, warning lamps and message centre **(46/43)**.
8. Message centre control **(43)**.
9. Wiper/washer controls **(41)**.
10. Engine START/STOP **(61)**.
11. Audio system and controls **(84)**.
12. Touch screen **(81)**.
13. CD eject.
14. Dynamic stability control (DSC) off **(48)**.
15. Hill descent control (HDC) **(79)**.
16. Central locking, lock.
17. Central locking, unlock.
18. Parking aid switch **(71)**.
19. Intelligent stop/start **(63)**.
20. Hazard warning lamps.
21. Climate control **(50)**.
22. Air conditioning on/off **(50)**.
23. Electronic parking brake **(68)**.
24. Terrain response **(77)**.
25. Gear selector **(64)**.
26. Climate control recirculation on/off switch **(50)**.
27. Heated steering wheel.
28. Telephone and voice recognition **(103/101)**.
29. Horn.
30. Steering column adjustment lever **(17)**.
31. Cruise control switches **(76)**.
32. Exterior mirror adjustment **(36)**.
33. Window switches **(34)**.
34. Rear window isolator **(34)**.
35. Interior illumination control **(32)**.



