

- Attachment of accessories to the front or sides of the vehicle.

DISABILITY MODIFICATIONS

Occupants with disabilities which may require modification of the vehicle, must contact a Dealer/Authorised Repairer before any modifications are made.

DISABLING THE PASSENGER AIRBAG

Note: *The passenger airbag should be disabled only when a rearward facing child restraint is fitted to the front passenger seat.*




Crash test data and statistics show that the safest place for a child to be restrained is in a child seat correctly fitted to the vehicle's rear seat.



Do not use a child restraint on a seat protected by an operational airbag in front of it. Doing so presents a high risk of death or serious injury to the child in the event of an accident.



Do not fit a child restraint to the front passenger seat if the SRS warning light illuminates continuously with the ignition on.

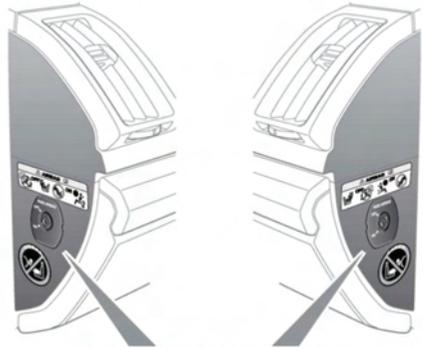

E147411

To disable the passenger airbag:-

1. Remove the emergency key blade from the remote control.
2. Insert the end of the emergency key blade into the slot in the switch and rotate the switch to the off position.



As soon as the child seat is removed from the front passenger seat, the airbag must be turned on. Failure to do so will put any front seat passengers at greater risk of death or serious injury in the event of an accident.

Airbags



E136712



When checking the operational status of the front passenger airbag, ensure that the ignition is switched on.

The passenger airbag operational status indicator illuminates yellow when the airbag has been disabled.

Note: *The indicator will only illuminate when the ignition is turned on or the engine is running.*