

### KICK-DOWN

Push the accelerator pedal fully down to achieve rapid acceleration in automatic mode. When the pedal is relaxed, normal gear changing will resume.

### ROTARY DRIVE SELECTOR

**P** should normally be selected before switching off the engine. If any other gear is selected at turn off, the selector will move to **P** before retracting into the center console.

If the engine is switched off with **N** selected, the system will wait for ten minutes before selecting **P**. This delay allows the vehicle enough time to be conveyed through a car wash. Do not use for vehicle recovery purposes.

If your vehicles requires recovery by towing, the recovery must be undertaken by qualified personnel. See **225, RECOVERY METHOD**.

### IF THE DRIVE SELECTOR FAILS TO ELEVATE

If the drive selector is obstructed, remove the obstruction and then start the engine. The selector should elevate as normal.

If the selector still fails to elevate, even if there is no obstruction, a fault in the system is indicated. The selector can still be used in the lowered position. Ensure that **P** is selected before engine switch off. Have the fault rectified at the earliest opportunity.

### TRANSMISSION FAULT

In the event that the transmission develops a fault, a warning message may be displayed in the message center and only limited gears may become available. You should seek qualified assistance immediately.