



SL1872

Using the appropriate button (6) or (10) or on screen soft key (right or left) to select the required screen, will allow options to be set and selected.

Note: A help screen is available from each screen/menu. To view the help screen for guidance on the available functions and options, touch the question mark (?) icon.



SL1873

HEADPHONES

The volume control for each set of headphones is adjusted on the headphones.

Press the channel selector button to cycle through available channels. Select the channel appropriate for the required screen.

Note: These headphones are not intended for use by the driver or outside the vehicle.

Note: The earpiece exteriors must remain exposed to the infra red transmitter in the overhead console. Any barrier will prevent them from working correctly.

When not in use, the headphones should be turned off.

⚠ WARNING

Always store headphones safely when not in use. Do not leave them unsecured as they may cause injury in the event of sudden braking or impact.

REMOTE CONTROL BATTERY

The remote control battery is automatically recharged while the remote is docked. The battery is not serviceable and should not be changed or removed by the user.