

### HEADLAMPS - CONDENSATION

Fogging of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.

**Note:** Hazard warning lamps can be used when the ignition is on or off.

### ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

With the headlamps on, AFS will adjust the beams when cornering to provide improved illumination in the direction of travel.

AFS is deactivated when:-


- Reverse gear is selected.
- The vehicle is stationary.
- Daytime running lamps are on.

If a system fault is detected the headlamps will attempt to move to the central position and then remain stationary. The AFS warning indicator will illuminate to indicate that a fault is present.



If the warning lamp illuminates, contact your Retailer as soon as possible.

### HAZARD WARNING LAMPS

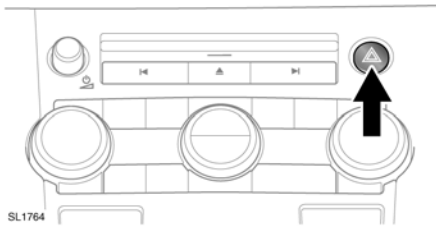

Press to turn the hazard warning lamps on. Press again to turn off. When the hazard warning lamps are operating, the direction indicator warning lamps will flash in time with the hazard warning lamps.